


FleetBroadband LaunchPad 1.4.0.

Briefing note

Release date: 30 September 2008

Updates in FleetBroadband LaunchPad 1.4.0

Inmarsat I-4 satellite repositioning

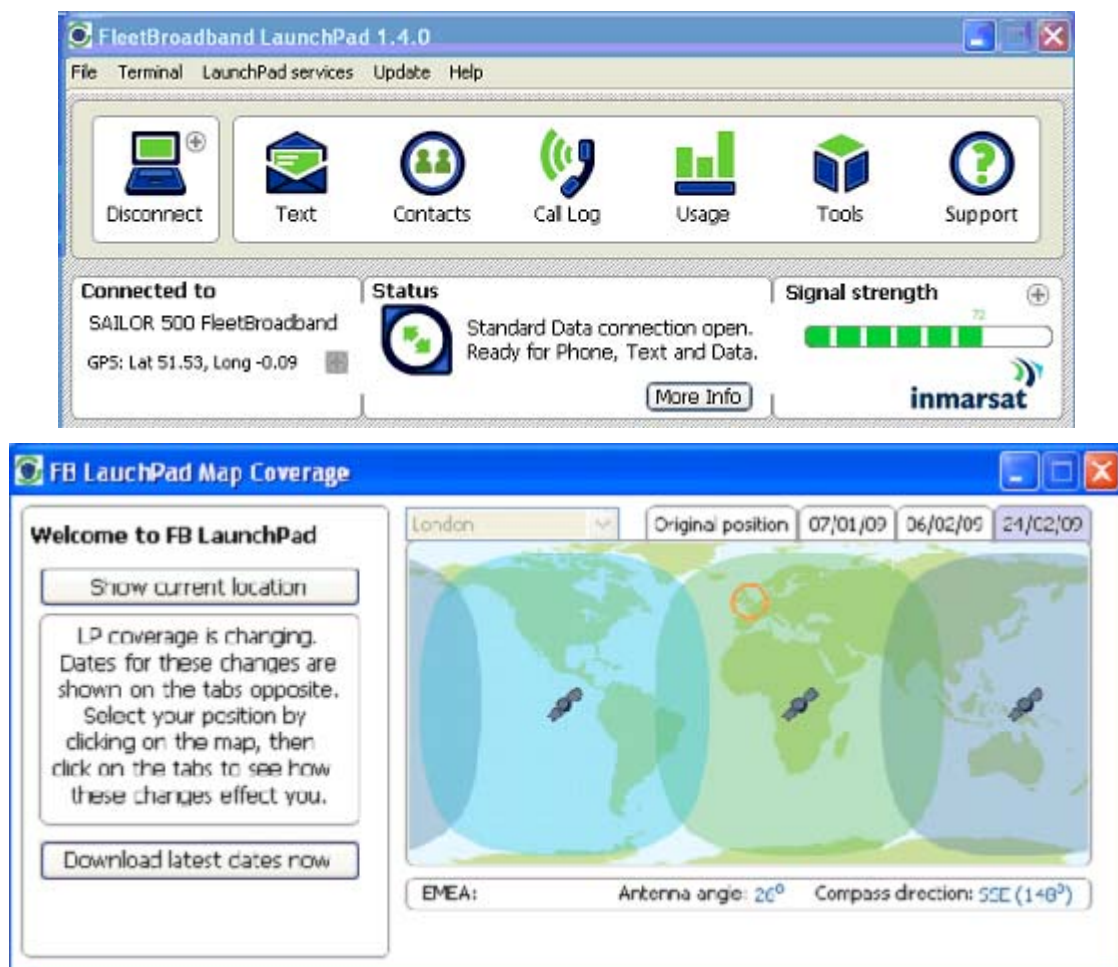

Following successful launch of the Inmarsat I-4 F3 satellite, Inmarsat will initiate a programme of repositioning its I-4 satellites in order to optimise the network.

This repositioning process is currently planned to start in January 2009 and will be completed by the end of February 2009, providing a global FleetBroadband service. For more information on repositioning and its benefits please visit the Inmarsat website www.inmarsat.com.

A tool has been included in FleetBroadband LaunchPad 1.4.0 to enable users to see how repositioning effects them. Simply download and install the application and you will be able to see if, for your chosen location, your coverage will be effected.

Selecting the **Tools** icon, then click on the small coverage map icon this will open a new window showing the new coverage map, above. This map shows the satellite repositioning stages, pointing details and dates. If repositioning dates change you can always check for the latest dates whether you are online using your LAN or over FleetBroadband. Please note that the download size of the dates update is less than 1.5kB.

Please note that when you first install FleetBroadband LaunchPad, you will need to check for the latest repositioning dates.

FleetBroadband LaunchPad 1.4.0 for PC is released and available for download now. Go to **www.inmarsat.com/support**, click on **FleetBroadband**, then click on **LaunchPad**.

Recommendations for installation

Inmarsat advises that all customers install FleetBroadband LaunchPad 1.4.0 to take advantage of the features of this custom-designed interface to your FleetBroadband terminal.

Terminal firmware

This version of FleetBroadband LaunchPad is for use with the following FleetBroadband terminals:

- JRC JUE-250 software version 5.0.1.5 or above.
- Thrane & Thrane SAILOR 250 and SAILOR 500 software version 1.05 or above.

Installing LaunchPad 1.4.0

You must have a PC running Windows XP before you can install FleetBroadband LaunchPad 1.4.0

Note: FleetBroadband LaunchPad will be compatible with Windows Vista from end of 2008.

To install this FleetBroadband LaunchPad version:

- a. Download the installer from **www.inmarsat.com/support**, click on **FleetBroadband**, then click on **LaunchPad**. Follow the on-screen instructions to

download the installer to your desktop. double-click on the LaunchPad 1.4.0 installer.

- b. Follow the on-screen instructions.
- c. After installation, double-click on the icon to open FleetBroadband LaunchPad.

A number of guides to help you use FleetBroadband LaunchPad are available for download from the Inmarsat web site. Go to **www.inmarsat.com/support**, click on **FleetBroadband**, then click on the required guide.

Using TCP Accelerator

TCP Accelerator is not included as part of FleetBroadband LaunchPad. If you have not already installed TCP Accelerator, Inmarsat strongly recommend that you take advantage of the improved performance that TCP Accelerator provides over FleetBroadband, you must install it separately. To download TCP Accelerator, go to **www.inmarsat.com/support**, click on **FleetBroadband**, then click on **TCP Accelerator** and follow the on-screen instructions.

Known issues with this release

When a Primary and a Secondary Data connection are open together, to disconnect, first disconnect the Secondary connection and then the Primary connection. If the Primary connection is disconnected first the secondary connection may not disconnect correctly and the terminal will need to be restarted.

inmarsat.com/fleetbroadband

Whilst the above information has been prepared by Inmarsat in good faith, and all reasonable efforts have been made to ensure its accuracy, Inmarsat makes no warranty or representation as to the accuracy, completeness or fitness for purpose or use of the information. Inmarsat shall not be liable for any loss or damage of any kind, including indirect or consequential loss, arising from use of the information and all warranties and conditions, whether express or implied by statute, common law or otherwise, are hereby excluded to the extent permitted by English law. INMARSAT is a trademark of the International Mobile Satellite Organisation. Inmarsat LOGO is a trademark of Inmarsat (IP) Company Limited. Both trademarks are licensed to Inmarsat Global Limited. © Inmarsat Global Limited 2008. All rights reserved.